Wall Mounted Rotary Panel

Model No.: T1-K, T2-K, T3-K

1-3 color/Glass panel/Rotary dimming/DC input/3 channel constant voltage PWM output/Wireless remote control



Features

Rotary panel single color, dual color or RGB PWM constant voltage controller.

- Rotate knob to change RGB color, color temperature or brightness.
- 256 levels 0-100% dimming smoothly without any flash.
- Compatibility with RF 2.4G single zone or multiple zone remote control.
- Push/Rotate with chord tones and LED indicator.
- White & Black glass panel available.

Technical Parameters

Input and Output			
Model	т1-К	T2-K	ТЗ-К
Input voltage	12-24VDC	12-24VDC	12-24VDC
Input current	12.5A	12.5A	12.5A
Output voltage	4 x (12-24)VDC	4 x (12-24)VDC	3 x (12-24)VDC
Output current	4CH,3A/CH	4CH,3A/CH	3CH,4A/CH
Output power	144-288W	144-288W	144-288W
Output type	Constant voltage	Constant voltage	Constant voltage
Light type	Single color	Dual color	RGB


EMC standard (EMC)	EN301 489,EN 62479
Safety standard(LVD)	EN60950
Radio Equipment(RED)	EN300 328
Certification	CE,EMC,LVD,RED

Environment				
Operation temperature	Ta: -30°C ~ +55			
Case temperature (Max.)	Tc:+85°C			
IP rating	IP20			

Warranty and Protection Warranty 5 years Protection Reverse Polarity Over-heat



Note: After push knob to turn off light, long press push knob for 5 seconds will turn on or turn off tone.

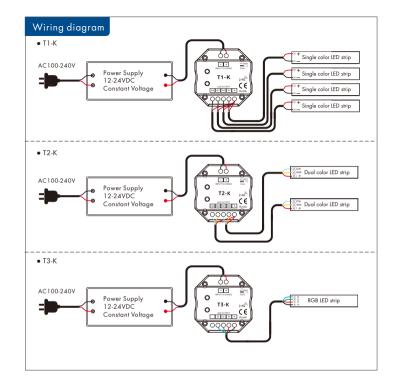

LED power supply voltage and power select

- 12V lamp, Input 12V power supply, can load 0~144W,
- 24V lamp, Input 24V power supply, can load 0~288W, The power supply power must larger than load power 20%.

Match Remote Control (two match ways)

The rotary panel controller can also match with the RF remote (optional). End user can choose the suitable match/delete ways. Two options are offered for selection:

Use Knob

Use Power Restart

Match:


Turn on light, turn off, immediately push the knob for 5s, then press on/off key (single zone remote) or zone key (multiple zone remote) of the RF remote within 5s. The LED indicator fast flash 3 times means match is successful

Delete:


Turn on light, turn off, immediately push the knob for 10s, delete all matched RF remote. The IED indicator fast flash 6 times

means all matched remotes were deleted.

Mechanical Structures and Installations



Installation diagram:





Baseplate

Base




Delete:

Match:

Switch off the power, then switch on power again, immediately short press on/off key (single zone remote) or zone key (multiple zone remote) 5 times on the remote. The light blinks 5 times means all matched remotes were deleted

Typical base as below:



European style

86 size